

Outdoor Ground/Grass Protection Locking Mats Installation Guide

1. It is recommended that these mats are installed on grassed areas with reasonably level ground.
2. If the site survey identifies potholes or undulations in the installation area, they should be filled with topsoil or sharp sand and then should be compacted with a roller. Grass seed should also be sown in sections of the installation area if required.
3. Check ground levels around the base posts/legs of equipment. Tamper the ground and address any undulations with a last fill of topsoil or sharp sand prior to commencing installation.
4. Measure and mark out the area to be covered.
5. Lay the mats in required areas. Ensure all are laid as shown on image 1. Mats should be cut to fit around equipment and obstacles (see image 2).
6. Cut into the ground about 75mm deep along the outside edge of the perimeter area to be covered using a grass edge cutter or similar.
7. Roll back the mat and starting about 150mm in from the outside edges of the mats, use a spade and cut the top turf away in the direction of the 75mm deep cut finishing at the depth. This will leave a wedge shape channel. Continue around the perimeter of the laid mats.
8. Roll the mat back and down into the channel and pin the edge through the small holes in the mat and into the ground. Use one pin per mat corner and one midway. You should now have a ramped edge all the way around. Now place the wedge of turf back into the recess. Bring the level back up to its original level and flatten into the existing ground. (Image 3)

After all installations are complete water the area well & frequently.

Image 1

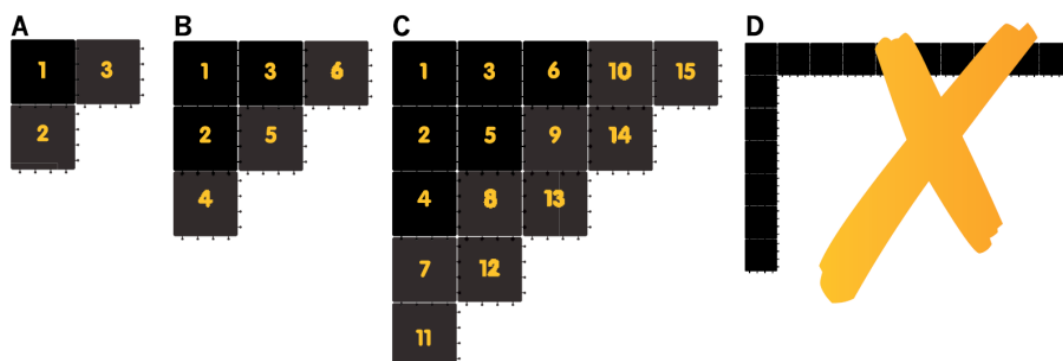


Image 2



Image 3



Lift up
soil/turf
to knock
pegs in



Turf folded
back down
to hide pegs

If you have any queries or require further help please do not hesitate to contact one of our team on 01278 783322 and they will be able to assist you.